Servo-u

- short guide

Setting up

- 1. Plug in the power cord.
- 2. Open the hatch on the side and switch the ventilator to the on position.

NOTE: When switching on the Servo-u, you need to first pull the ON/OFF switch downwards.

- 3. Connect the air and oxygen hoses.
- 4. Lock the wheels on the cart.
- Start the PRE-USE CHECK. Follow on-screen instructions. (You need the test tube during the Pre-Use Check). The patient circuit test is included in the Pre-Use Check.
- Choose PATIENT CATEGORY: adult, pediatric or neonatal (optional).
- Choose VENTILATION TYPE: invasive or non-invasive (optional).
- Calculate Predicted Body Weight (PBW) automatically by tapping PBW and enter patient gender and height. (For pediatric and neonatal patient category it is the patient's weight). Tidal Volume in ml/kg will now be monitored.
- 9. Tap **VENTILATION MODES**. (If you tap and hold on the mode you will get more information).
- 10. Choose mode and adjust the settings.
- 11. Some settings have dynamic images.
- 12. The safety scale can be expanded by tapping .
- 13. Change the alarm limits in alarm window.
- 14. Tap **START VENTILATION**.

Refer to User's manual for detailed information



STANDBY

PREVAS IN DBY

PREVAS IN DB







High priority

Medium priority

Low priority




Alarms audio paused - Active alarms can be silence for two minutes by tapping.



Pre-silence alarms – To silence most alarms for two minutes, tap when no alarms are active.

> Tap on the active alarm and you can adjust alarm limits directly.



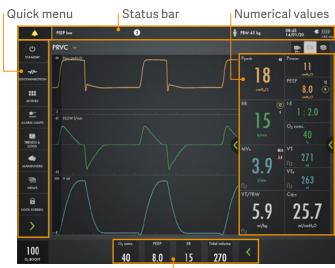

Direct access bar

Current measured value

Autoset Alarm limits in controlled modes



Alarm volume

